
NEUTON POWER 7KW WALLPOD

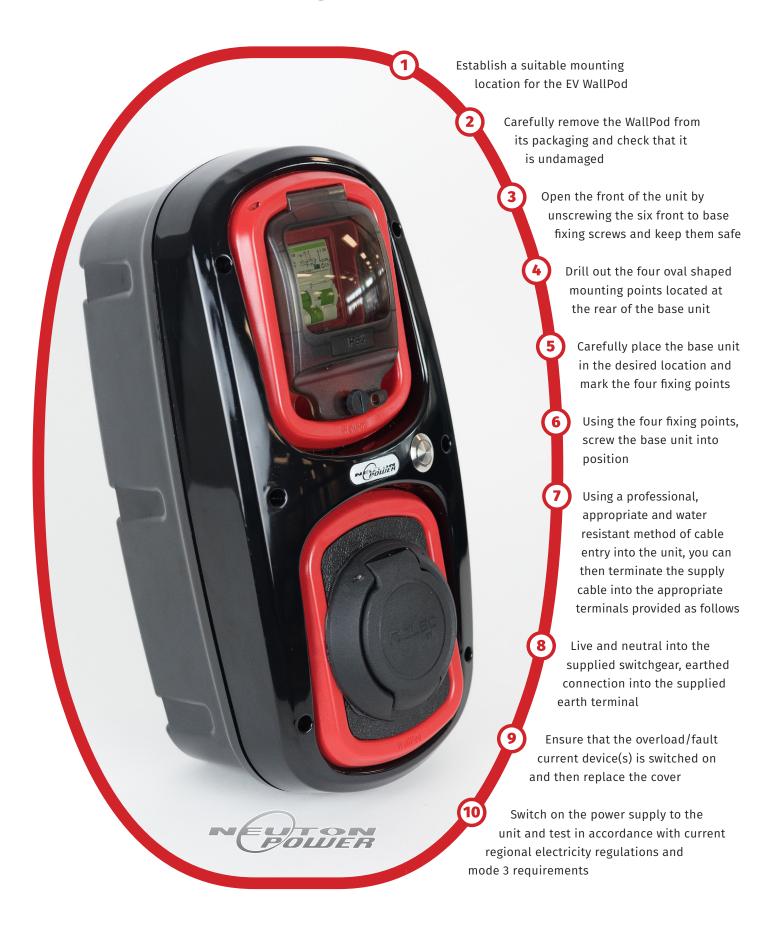









OPERATING INSTRUCTIONS

- 1) Status indicator guide*
- (2) Flashing blue light ready for charge
- (3) Fixed green light charging in progress
- (4) Flashing red lights fault indicated - switch off unit at source and switch back 20secs after to see if the fault has cleared itself. If the fault persists contact your installer





CHARGING YOUR VEHICLE

- (1) Insert your charging lead into the vehicle first then insert the other end into the charging point (If using a tethered lead style charging point, plug straight into the vehicle)
- (2) To disconnect: remove plug from the vehicle first then remove the plug from the charging point (this allows time for the lock to disengage in the socket)



Open the front of the unit by unscrewing the six front to base fixing screws and keep them safe.



1) If you have a lead, please make sure stowed away and the cable is around the unit to avoid laying on ground and it getting damp or being over by the vehicle

- (2) The charging point should electrically inspected annually
- (3) Please ensure the wallpod cleaned regularly removing debris and water so it aesthetically pleasing



Drill out the four oval shaped mounting points located at the rear of the base unit.

Live and neutral into the supplied switchgear, earthed connection into the supplied earth terminal.

